


# MC888S Manual Software Upgrade Guidance


1.Connect to MC888S through WiFi using Phone or Laptop.

2.Open Web browser and key in “192.168.0.1”.


(1) Laptop view:

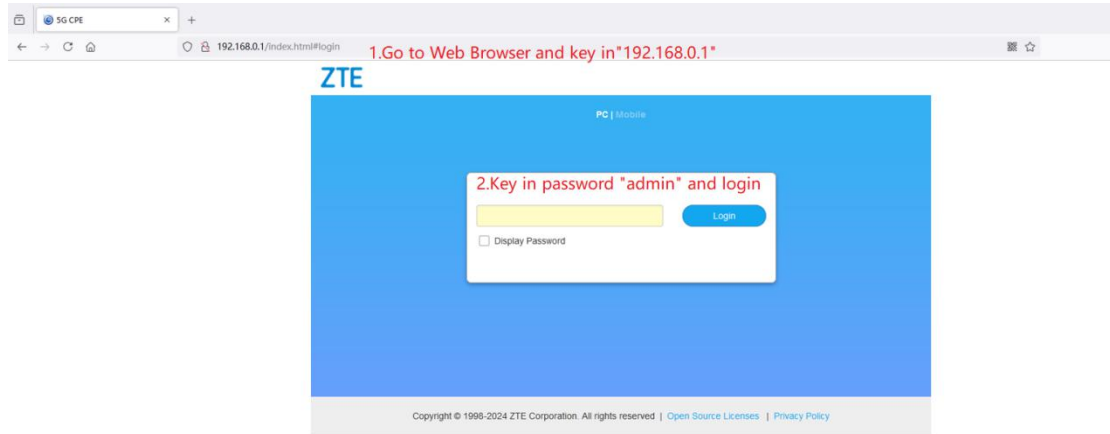

(2) Phone view can change to Laptop view by clicking PC as show below.

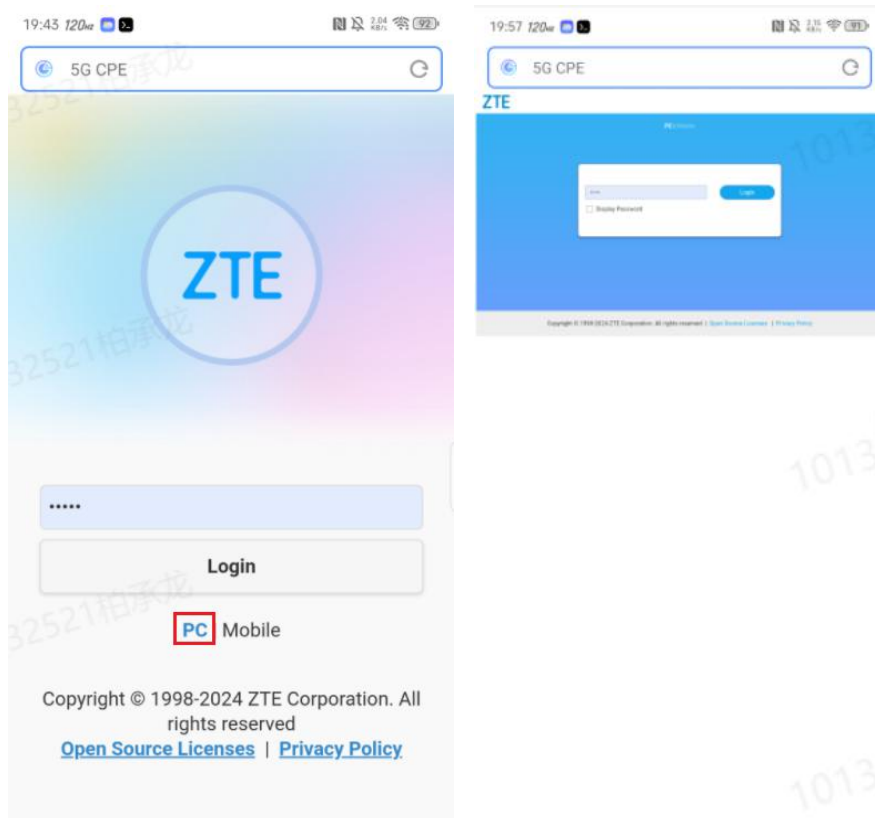


3. Key in password "admin" and Login.

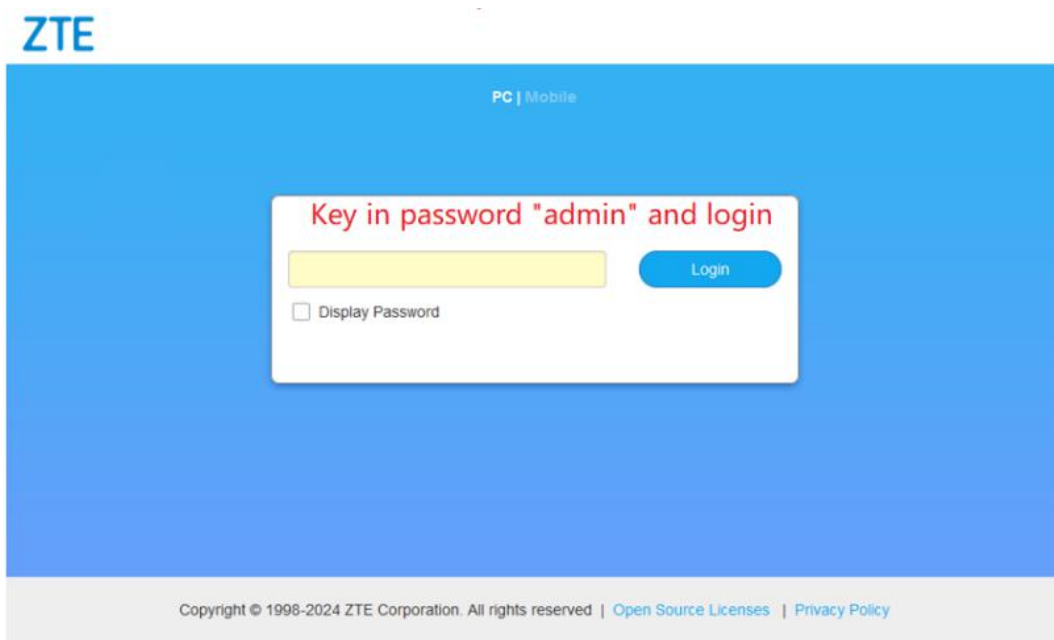


4. Go to [Advanced Settings](#) at the bottom of page.





5. Go to **Update** and click **Check**.

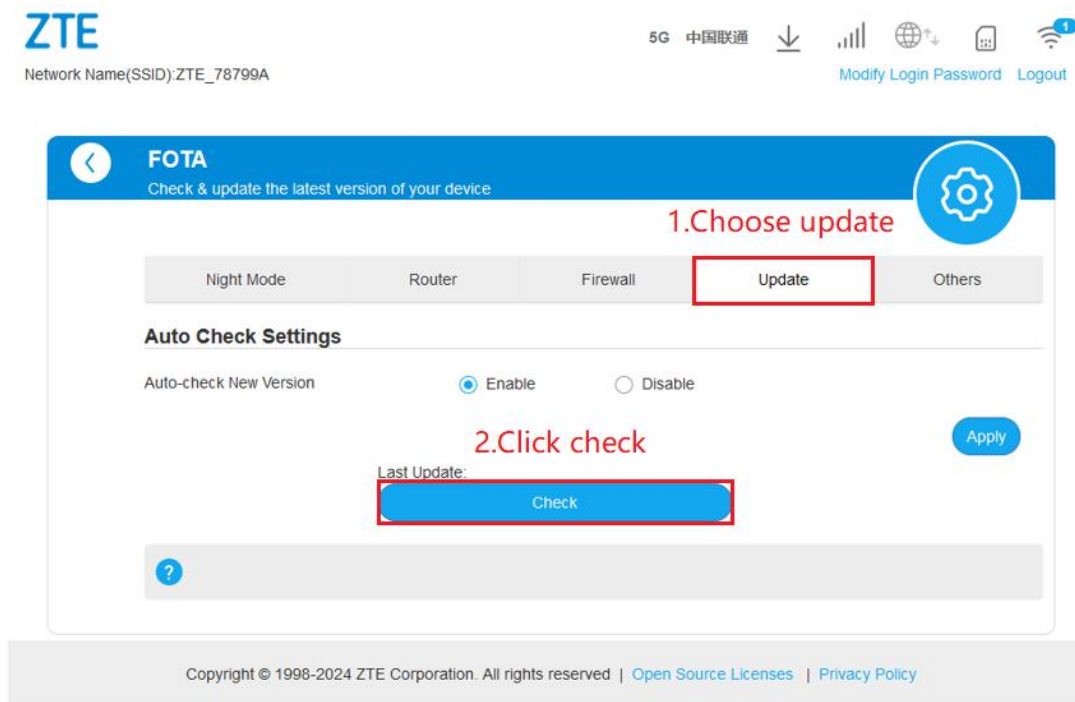

6. Follow the instruction and click **Update**.

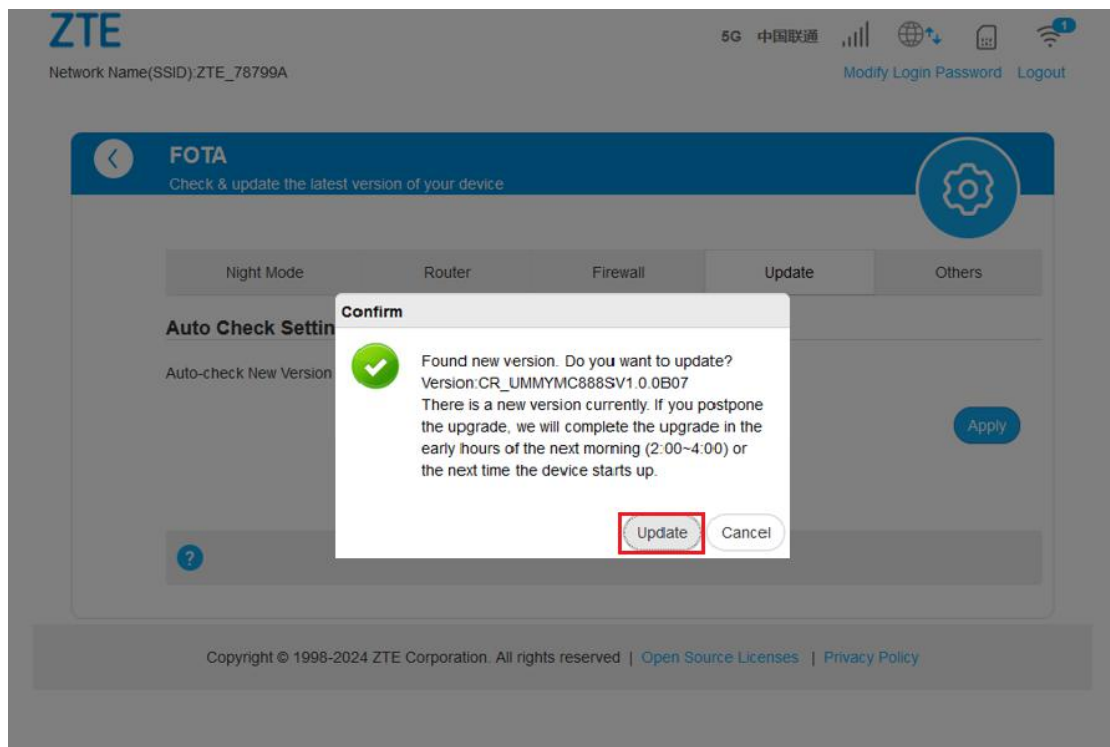

7. The device will download the software and click “OK” once it is finished downloading. The device will restart to finish the update. The overall update process will take about 15min. **Please wait patiently and do not turn off the power.**

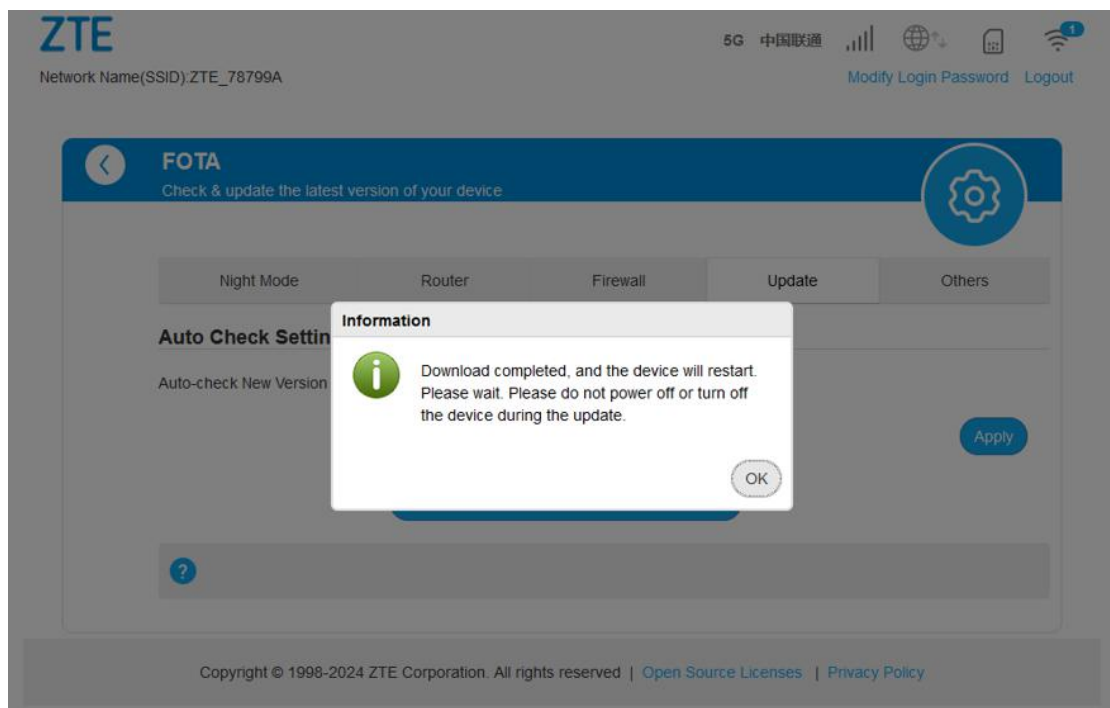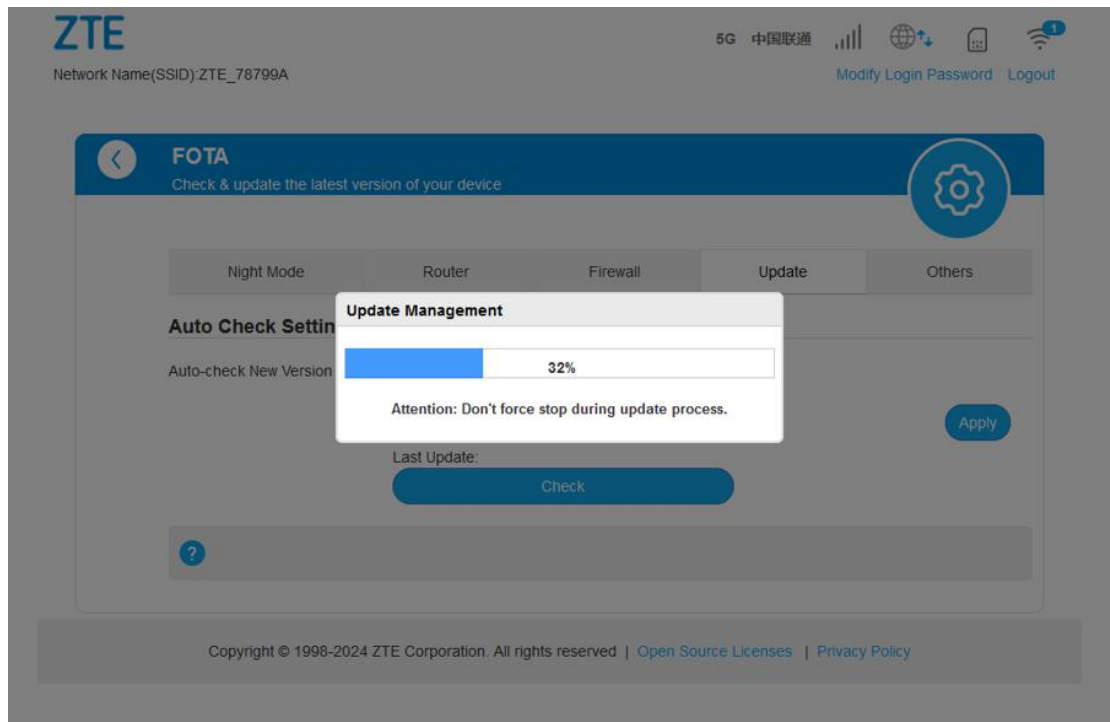

8. The latest version will be **CR\_UMMYMC888SV1.0.0B07**.

The screenshot displays the ZTE wireless broadband management interface. At the top left, the ZTE logo is visible. The network name (SSID) is ZTE\_78799A. The current mode is Wireless Broadband Mode. A 'Status Information' pop-up window is open, showing the following details:

| Status Information              |                               |
|---------------------------------|-------------------------------|
| SIM Card Number                 | 8613279292393                 |
| IMEI                            | 867336060148327               |
| IMSI                            | 460019207240884               |
| Signal Strength                 | -84 dBm                       |
| CA Status                       | No CA                         |
| 2.4G Max Access Number          | 64                            |
| Network Name (2.4GHz Main SSID) | ZTE_78799A                    |
| 5G Max Access Number            | 64                            |
| Network Name (5GHz Main SSID)   | ZTE_78799A                    |
| Wi-Fi Coverage                  | Long Wi-Fi Coverage           |
| IP Address                      | 192.168.0.1                   |
| MAC Address                     | 54:1F:8D:78:79:9A             |
| WAN IP Address                  | 10.17.182.76                  |
| Software Version                | <b>CR_UMMYMC888SV1.0.0B07</b> |
| Hardware Version                | MC888S_HW1.0                  |
| Terminal model                  | 5G Wireless Terminal MC888S   |
| website                         | www.zte.com.cn                |
| Startup Uptime                  | 00:02:49                      |

Below the status information, there are several navigation options: Suggested Position, Data Usage, SMS, Mesh Network, and Advanced Settings. A QR code is also visible at the bottom of the interface.